

800i PVC

Moderate, PVC specialized extraction unit

PUREX
CLEAN AIR FOR EVERYONE



Description & features

- Clear & informative graphic display
- Highest grade HEPA and carbon technology
- Automatic electronic flow control - maintains a constant extraction rate even as the filter blocks
- Gas and particle sensors to warn the operator
- Adjustable airflow
- Specialized coating to prevent corrosion from PVC fumes

Filters



Main Filter Code

113648

Description

Chemical PVC



Main Filter Code

113649

Description

HEPA / Chemical PVC



Pre-Filter Code

110618

Description

Granular Pad PVC



Pre-Filter Code

111101

Description

F8 / F9 Labyrinth



Pre-Filter Code

200039

Description

Chemical Absorbant Pad

Specifications

Voltage	120v		230v	
	Part Number	080500DPVC	080501DPVC	
Wattage	2.4kW			
Frequency	50Hz / 60Hz			
Cabinet Height	1155mm			
Cabinet Width	571mm			
Cabinet Depth	675mm			
Cabinet Weight	100kg			
Airflow	800m3/h			
Sound Level	60dBa			

Machine supplied with

• 2 x Main Filter • 2 x Pre-filter • 1 x Absorbant Pad • 1 x Manual • 1 x 4.5m Fixed Power Cable (No Plug)

Find out more: Wpurex.co.uk | [T +44 \(0\)1405 746030](tel:+44(0)1405746030) | [E purex@purex.co.uk](mailto:purex@purex.co.uk)

Registered Office: Purex International Limited, QWP House, Island Drive, Capitol Park, Thorne, Doncaster DN8 5UE
Registered No. 5136616 England | VAT No. GB842 5025 49 | WEEE Producer Registration Number: WEE/CE0067TX
*Goods are subject to change | *Illustrations are 3D created visual representations



800i PVC

Moderate, PVC specialized extraction unit

Options

Connection kits


If you do not see a connection kit that fits your machine or pipework, please contact Purex or your representative

100105			100107		
Hose End Diameter	Hose Length	Purex Inlet Diameter	Hose End Diameter	Hose Length	Purex Inlet Diameter
100mm	2m	100mm	100mm	3m	100mm
<p>Connect to 100mm diameter pipe/port</p>  <p>2.0m</p>			<p>Connect to 100mm diameter pipe/port</p>  <p>3.0m</p>		

Interfacing

Interfacing can remotely start the Purex machine when the connected machine starts.

Interfacing can also warn the connected machine when the Purex machine is in alarm.

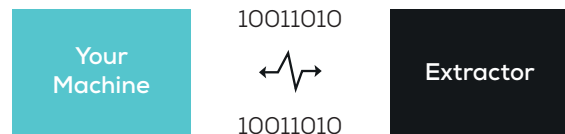

Take a look through our [Interfacing Guide](#) to see our extensive range of options